

DUST SUPPRESSION ATTACHMENT

Product Specification Sheet

OVERVIEW

Built to keep dust under control on site, this attachment offers a fast, low-cost way to fit dust suppression to almost any IBC. Water is directed both ahead of the forklift or telehandler and out to the sides, giving broad coverage from a single unit with no moving parts to maintain.

STANDARD FEATURES

- Quick screw fixing, fitted directly onto the IBC in seconds
- Two water distribution pipes with pre-set spray holes for forward and side coverage
- No moving parts — relies on gravity, so there's nothing to service or wear out
- Compatible with most standard IBC thread fittings

SPECIFICATION

Compatibility	Fits most standard IBC screw-thread caps
Coverage	Forward and sideways water distribution
Moving Parts	None, gravity-fed operation
Fitting Method	Direct screw fixing onto IBC thread
Manufactured	Tipping Skips Ltd, UK

Watch it in action on
YouTube



FITTING INSTRUCTIONS

- Unscrew the existing cap from the IBC.
- Line up the dust suppression kit with the IBC's existing thread.
- Turn the fixing cap clockwise until fully tight, so the unit is securely seated.
- Check that both the left and right four pipe holes are facing forwards.
- The attachment is now ready for use.

OPERATING INSTRUCTIONS

- Drive to the required location with the stop tap closed.
- Open the stop tap to let water flow through the pipes.
- Drive at a brisk walking pace, or at the speed required for the job.
- Close the stop tap fully once the job is finished.

HEALTH & SAFETY

- Check the IBC and dust suppression kit for any impact damage to the pipework before use.
- Confirm the kit is securely fixed before starting operation.

Note: The fuller the IBC, the greater the water pressure and so results are best with a well-filled tank.

